

5.7 On-Board Monitor Test

The On-Board Monitor Test is useful after servicing or after erasing a vehicle's control module memory. The On-Board Monitor Test for non-CAN-equipped vehicles retrieves and displays test results for emission-related powertrain components and systems that are not continuously monitored. The On-Board Monitor Test for CAN-equipped vehicles retrieves and displays test results for emission-related powertrain components and systems that are and are not continuously monitored. Test and components IDs are determined by the vehicle manufacturer.


 Use UP/DOWN scroll button to select On-Board Mon. Test from Diagnostic Menu and press ENTER button.

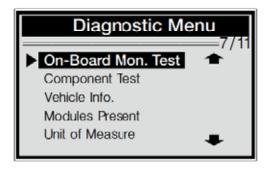


Wait a few seconds while the scan tool validates the PID MAP.

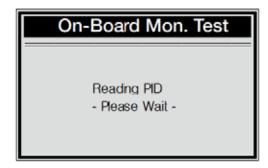


3). From **On-Board Mon**. Test menu, use **UP/DOWN** scroll button to select a test to view and press **ENTER** button.

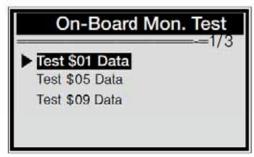


If the vehicle under test does not support the mode, an advisory message will be displayed on the screen.

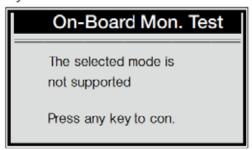


For CAN-equipped vehicles, test selections can be as below:

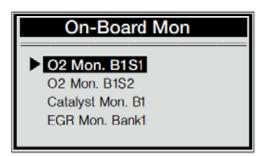

- 4). Use UP/DOWN scroll button to select the desired monitor from On-Board Mon. Test menu and press ENTER button.
- 5). View test data on screen.

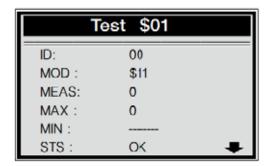

For CAN-equipped vehicles, test results displayed can be as below:

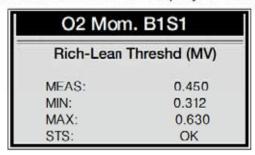

6). Press ESC button to return to the previous menus.